


ADDITIONAL DETAILS NOT REQUIRED

ANY STUDENT MAY CHOSE TO, BUT NOT BE REQUIRED TO PREFORM TWO EXTRA STEPS IN THIS PROJECT IF HIS OR HER SKILL LEVEL AND TIME FRAME ALLOWS IT.

1. CHAMFERED EDGES AT THE LEFT AND RIGHT OF FACE FRAME START AND STOP CHAMFER AT TOP IN LINE WITH THE DRAWER FRONT OPENING, BOTTOM IN LINE WITH DOOR OPENING CHAMFER TO MEASURE $3/8$ " ACROSS FACE
2. SHOW KNOWLEDGE IN USE OF WIDE BELT SANDER BY RUNNING YOUR ASSEMBLED FACE FRAME THROUGH MACHINE TO A FINISHED THICKNESS OF $3/4$ "

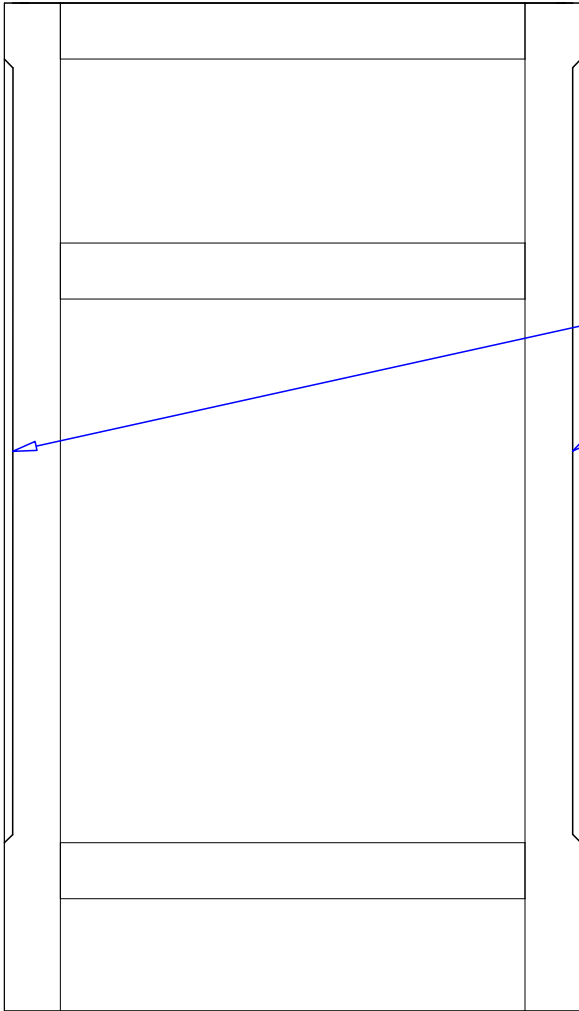

ANY STUDENT MAY ELECT TO DO EITHER, BOTH, OR NONE OF THE EXTRA DETAILS.

STUDENS WHO CHOSE NOT TO DO THESE EXTRA DETAILS WILL NOT BE PENALIZED.